 



SWINGING BALLET

DESIGN BY COEN MUNSTERS


12910 H6

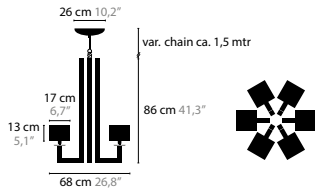

 
12914 H12

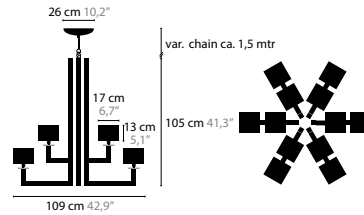


12918 H18

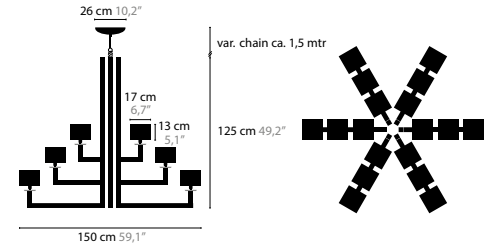 


12980 F1

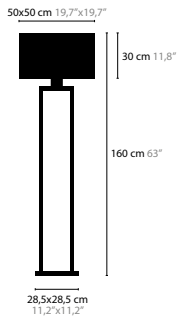 


12970 T1

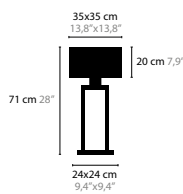 


12972 T1

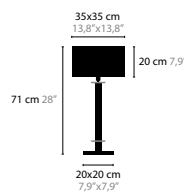 


12950 W1

 

12954 W2

 

12958 W3

 

SWINGING BALLET H6

BASE: 6 X E14 / 220V / MAX. 40W

12910 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET H12

BASE: 12 X E14 / 220V / MAX. 40W

12914 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET H18

BASE: 18 X E14 / 220V / MAX. 40W

12918 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET F1

BASE: 1 X E27 / 220V / MAX. 100W, INCL. REGULAR / DIMMER

12980

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET T1

BASE: 1 X E27 / 220V / MAX. 60W

12970

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET T1

BASE: 1 X E27 / 220V / MAX. 60W

12972 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET W1

BASE: 1 X E14 / 220V / MAX. 40W

12950 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET W2

 
BASE: 2 X E14 / 220V / MAX. 40W

12954 SWAROVSKI® STRASS®


COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SHADE

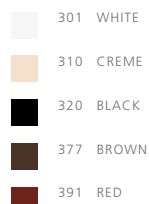


COLOURS

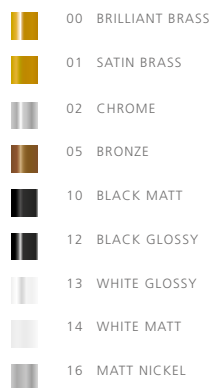 


GENERAL INFORMATION: - CYRSTAL: SWAROVSKI® STRASS®
- MIDDLE BASE ARTICLE 12910, 12914, 12918: OTHER LENGHTS ON REQUEST

OTHER COLOURS ON REQUEST

 
12922 H5

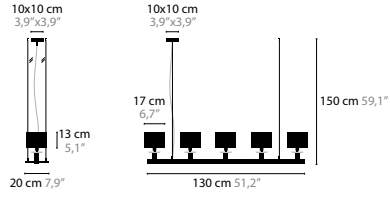


12926 H7

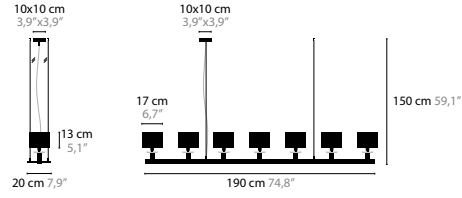 


12930 H10

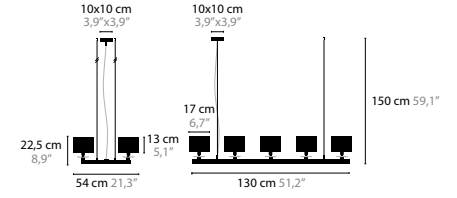 


12934 H14

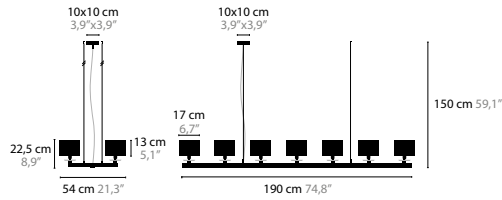 

12938 H17

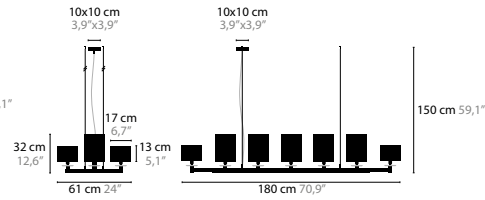 

12942 H23

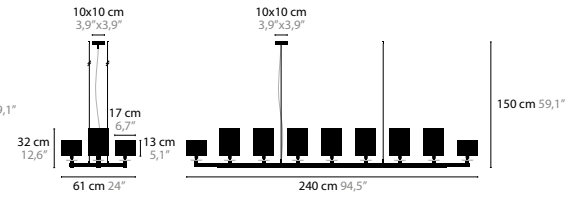 

SWINGING BALLET W3

BASE: 3 X E14 / 220V / MAX. 40W

12958 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET H5

BASE: 5 X E14 / 220V / MAX. 40W

12922 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET H7

BASE: 7 X E14 / 220V / MAX. 40W

12926 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET H10

BASE: 10 X E14 / 220V / MAX. 40W

12930 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET H14

BASE: 14 X E14 / 220V / MAX. 40W

12934 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET H17

BASE: 17 X E14 / 220V / MAX. 40W

12938 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SWINGING BALLET H23

BASE: 23 X E14 / 220V / MAX. 40W

12942 SWAROVSKI® STRASS®

COLOURS 00 01 02 05 10 12 13 14 16

SHADE 301 310 320 377 391

SHADE	301	WHITE
	310	CREME
	320	BLACK
	377	BROWN
	391	RED

COLOURS	00	BRILLIANT BRASS
	01	SATIN BRASS
	02	CHROME
	05	BRONZE
	10	BLACK MATT
	12	BLACK GLOSSY
	13	WHITE GLOSSY
	14	WHITE MATT
	16	MATT NICKEL

OTHER COLOURS ON REQUEST